
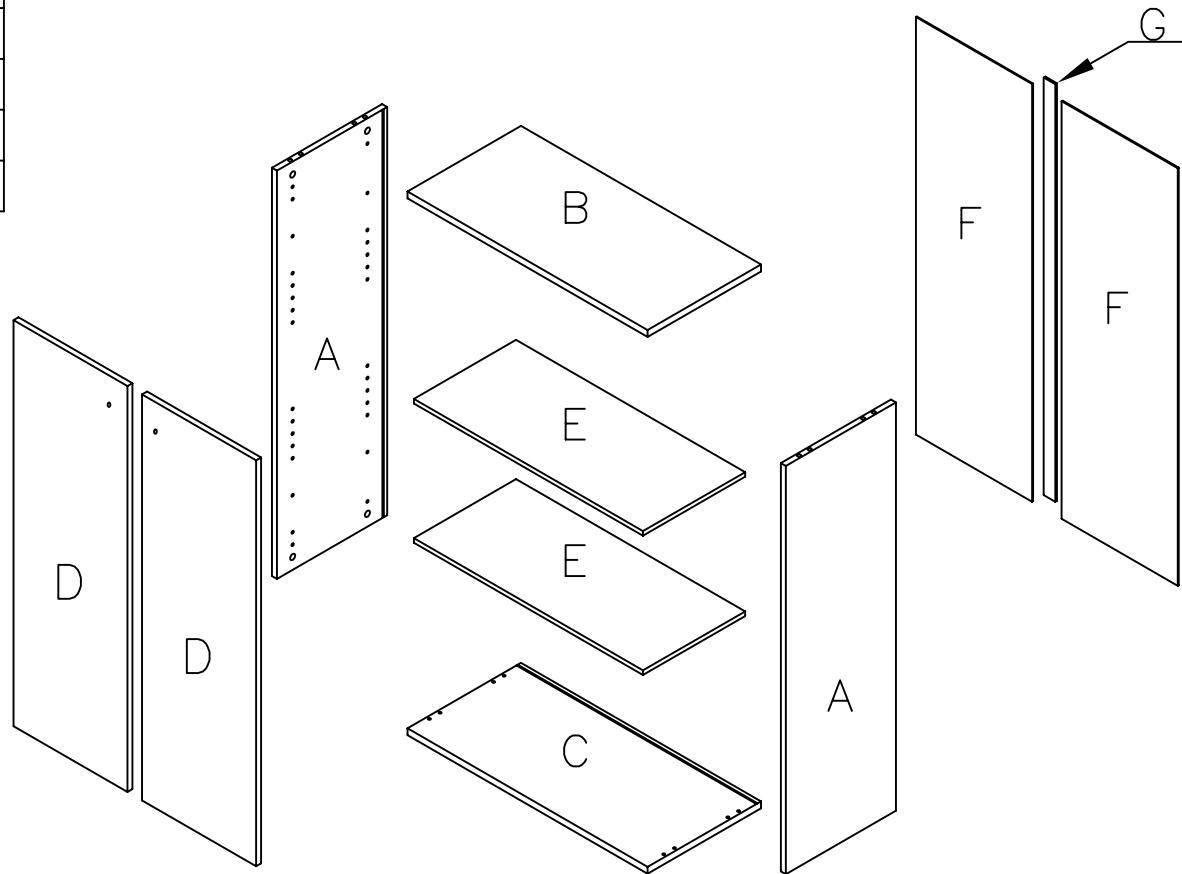
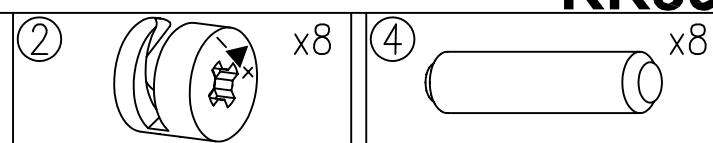
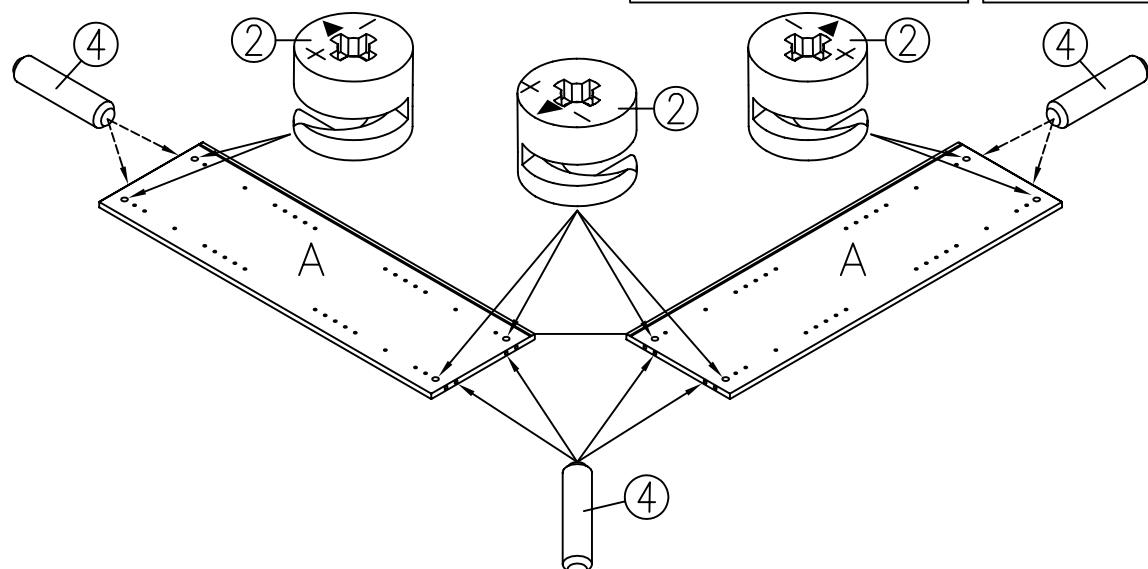
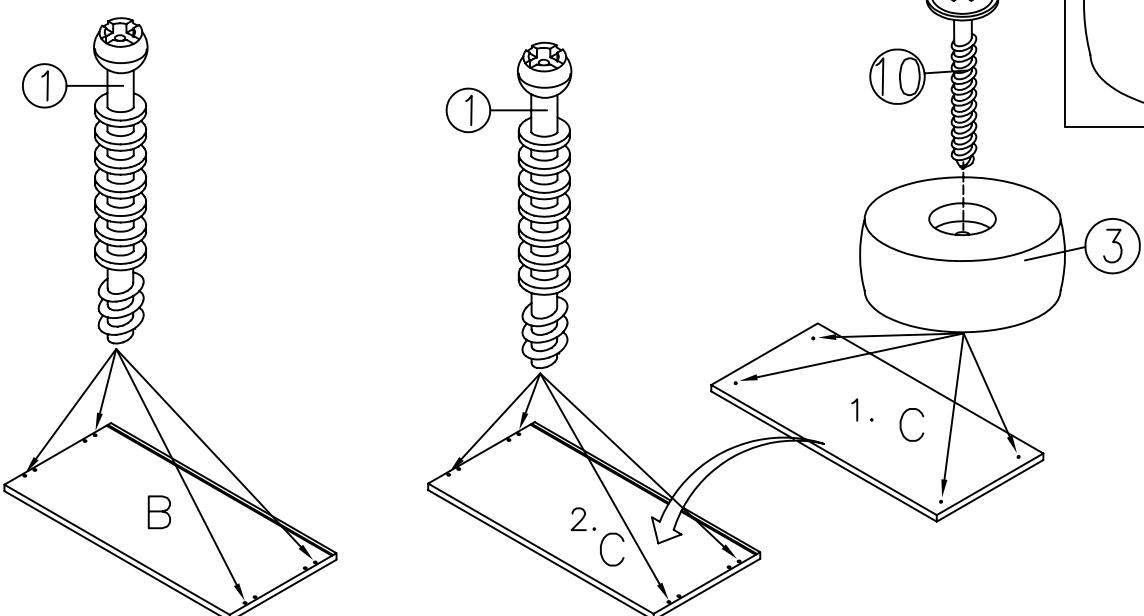
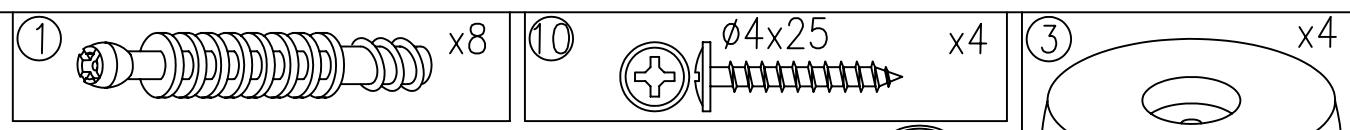



Ak bude v balení niektorá časť nábytku  
chýbať alebo bude poškodená  
kontaktuje predajcu kde ste produkt zakúpili.

	Kód
A x2	1556
B	3507
C	3509
D x2	60095
E x2	4554
F x2	0257
G	S30951

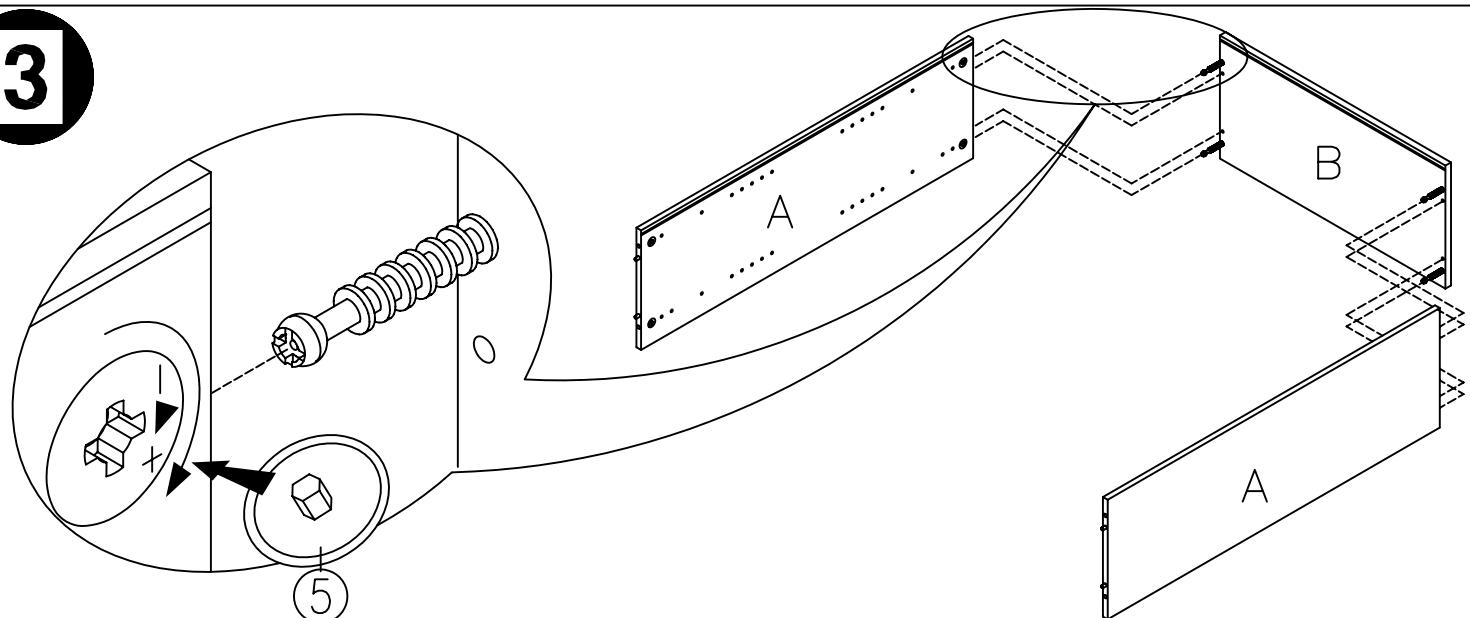


①	x8	S30211	②	x8	S30212	③	x4	S30554 / S32382	④	x8	S70969
⑤	x8	S30337	⑥	x2	S30337	⑦	x2	S32387	⑧	x2	S30157
⑨	x8	S30337	⑩	x4	S30151	⑪	x2	S30157	⑫	x4	S30978
⑬	x8	S30978	⑭	x8	S34701	⑮	x4	S33679	⑯	x4	




**1****2****3**

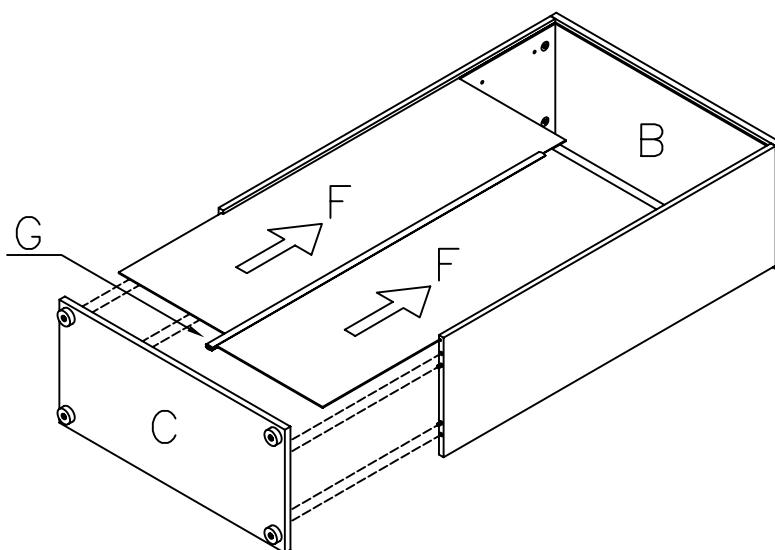**4****5****F****Pozor**


⑬

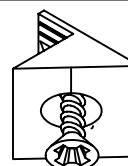



x8

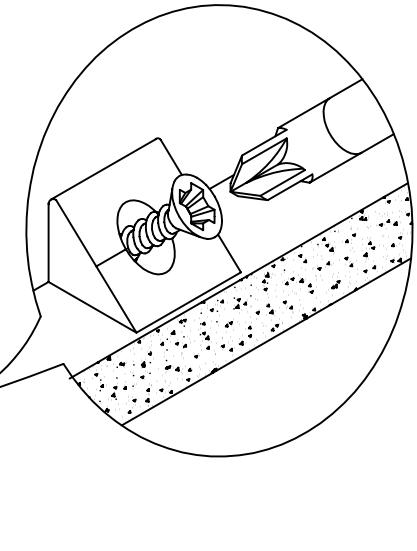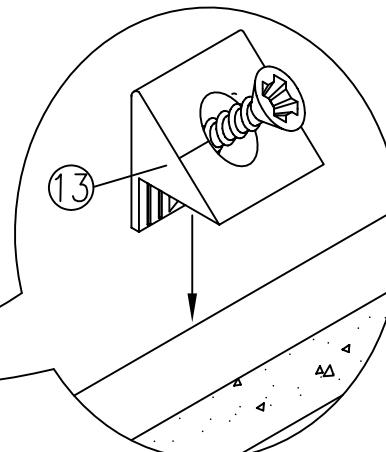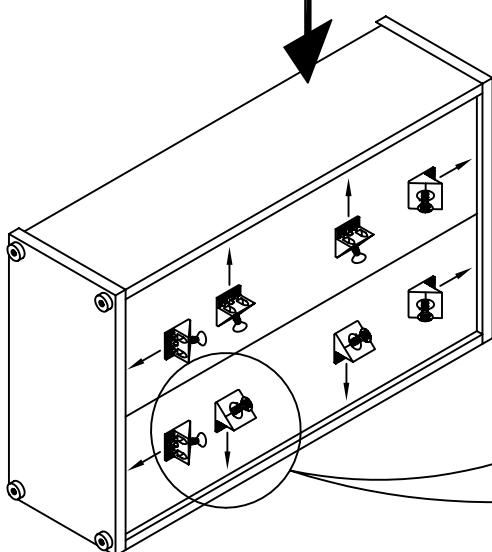
**6**

⑨

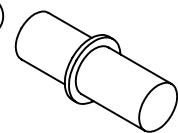

x8

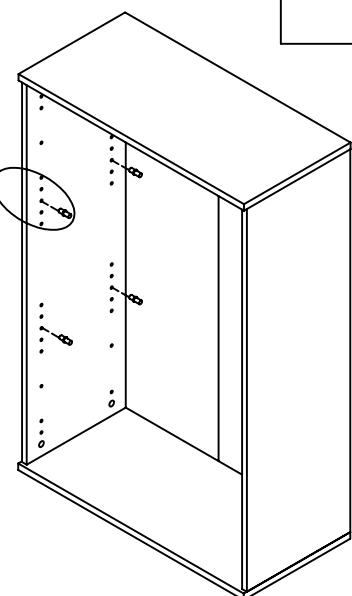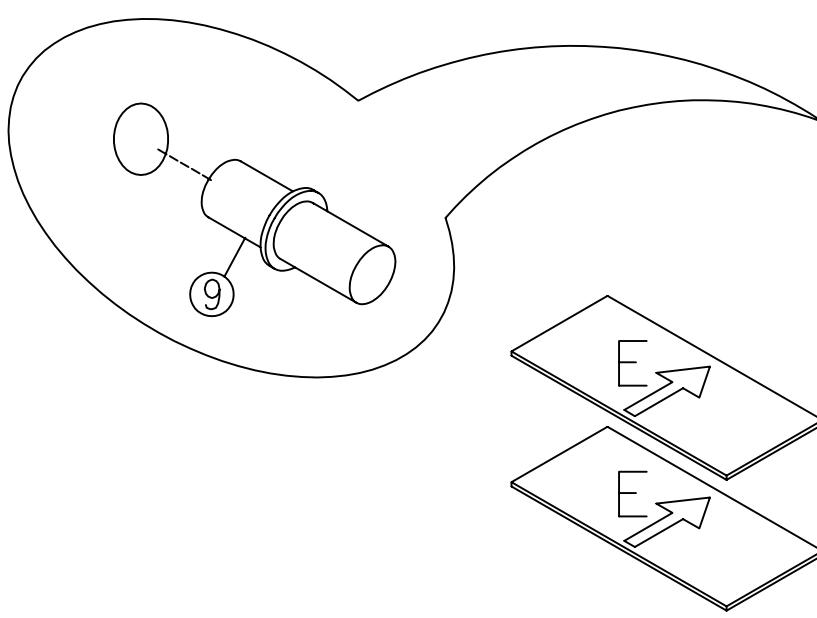

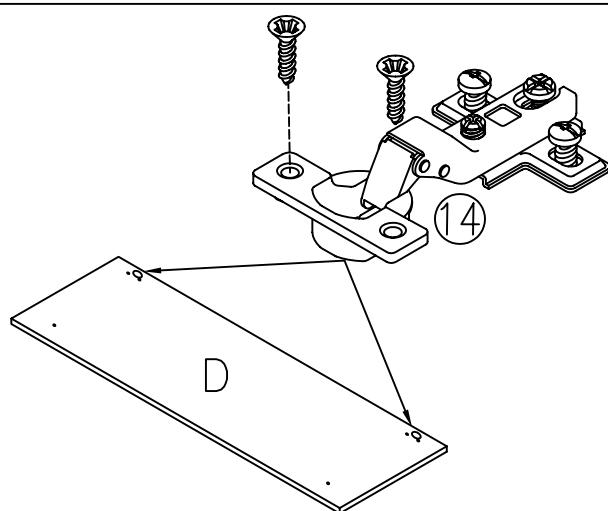**7****x2****8**