








 








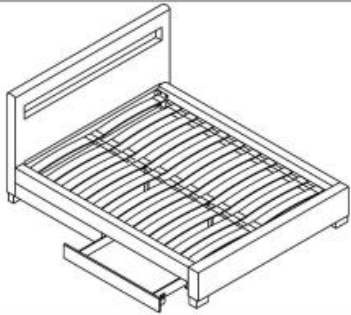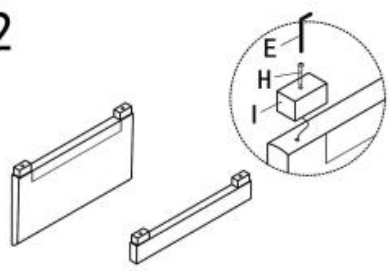







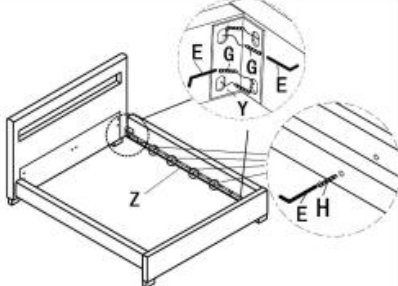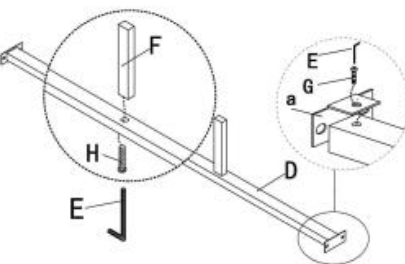





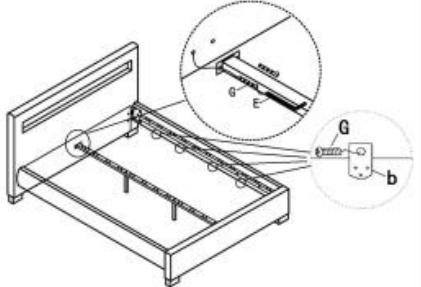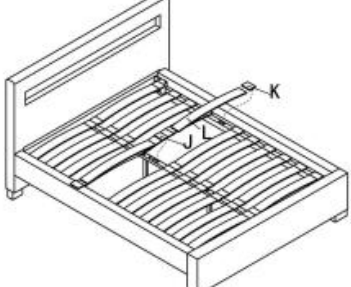

CLARETA 1894-1D -1 Montážny návod

A x1 	B x1 	<p>1</p> 	<p>2</p> 	
C x2 	D x1 			
E x1 	F x2 			
G x30 (8*20) 	H x14 (8*50) 			
I x4 	J x12 	<p>3</p> 	<p>4</p> 	
K x24 	L x24 			
M x8 	N x4 			
O x4 	P x4 			
Q x48 (3.5*15) 	R x16 	<p>5</p> 	<p>6</p> 	
S x32 	T x32 			
U x8 (8*35) 	V x1 			
W x1 	X x1 			
Y x4 	Z x2 	ax2 