
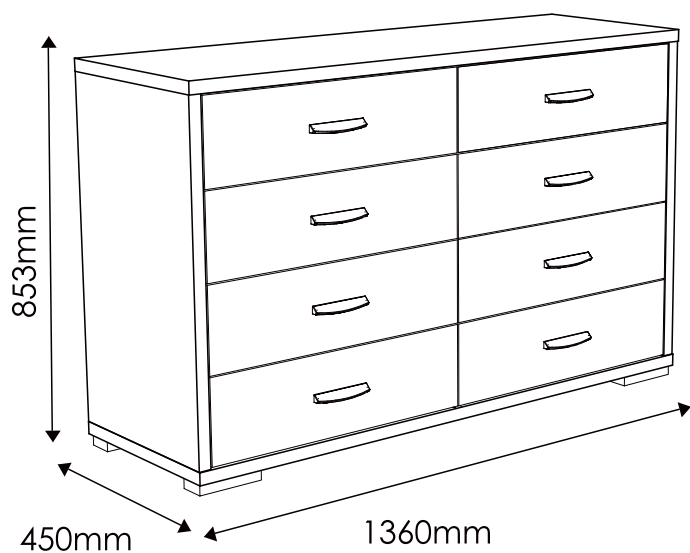
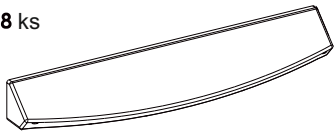



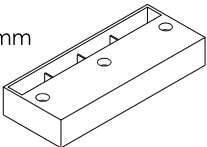




CLARO


TYP 42 - Komoda 8s














Kovanie

A1 76 ks $\varnothing 8 \times 35\text{mm}$ 	C2 32 ks EURO 5 x 13mm 	E0 22 ks (do E1) 
E1 22 ks $\varnothing 15 \times 12\text{mm}$ 	F1 22 ks $\varnothing 6 \times 34\text{mm}$ 	G0 22 ks (do G1 i G2) 
G1 16 ks $\varnothing 7 \times 50\text{mm}$ 	G2 6 ks $\varnothing 7 \times 60\text{mm}$ 	H1 8 ks 
I11 11 ks 4 x 30mm 	J1 48 ks 3 x 20mm 	K3 16 ks 4 x 22mm 
M 1 ks 	N1 80 ks 3 x 16mm 	O9 2 ks 150 x 60 x 25mm 
O10 1 ks $\varnothing 50 \times 25\text{mm}$ 	O13 2 ks 60 x 60 x 25mm 	R1 5 ks 
R8 16 ks 1,5 mm 	T4 8 kpl. L-400 	POZOR !!! Kovanie držte mimo dosahu detí!

Potrebné náradie

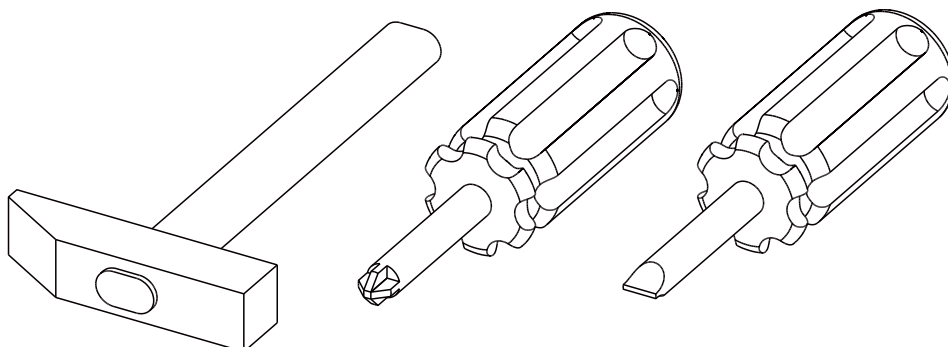

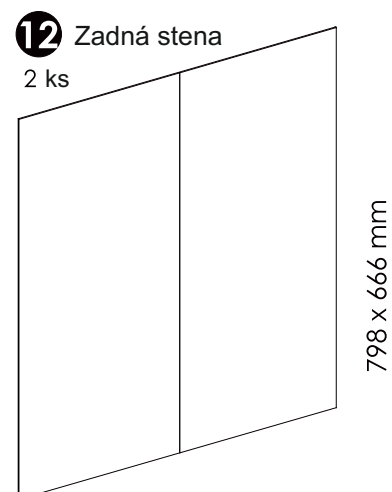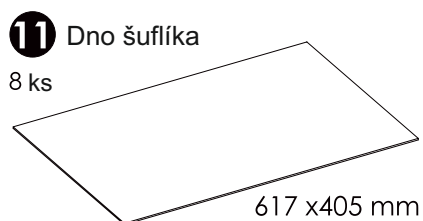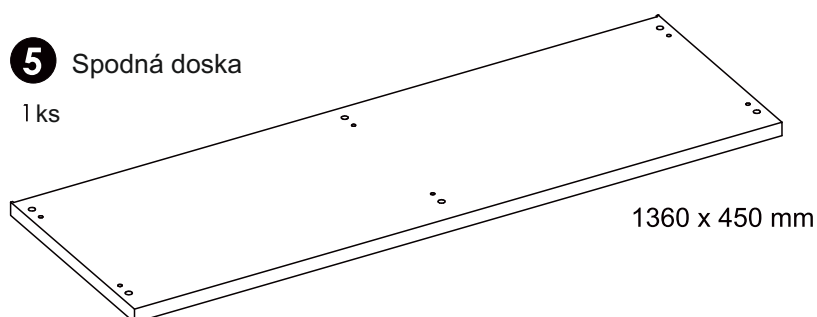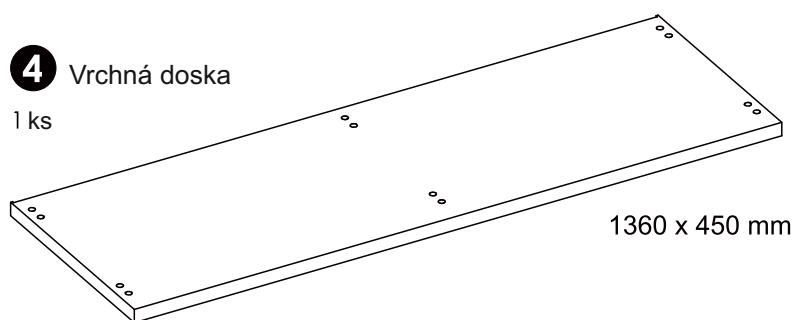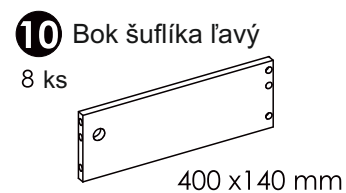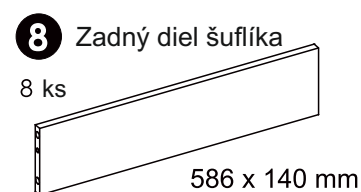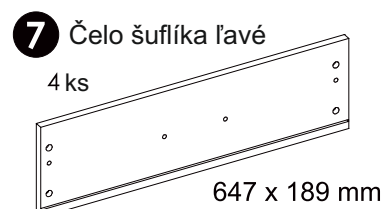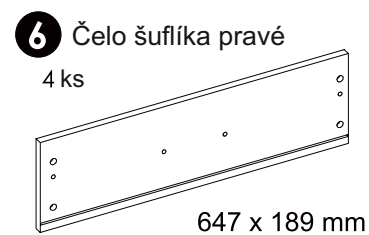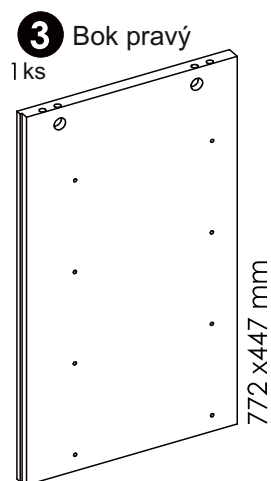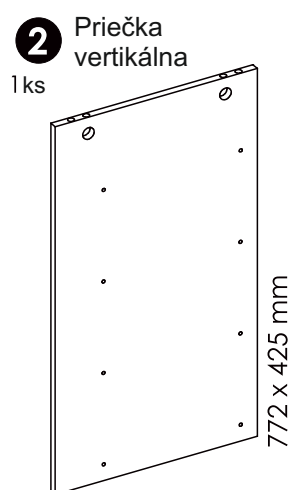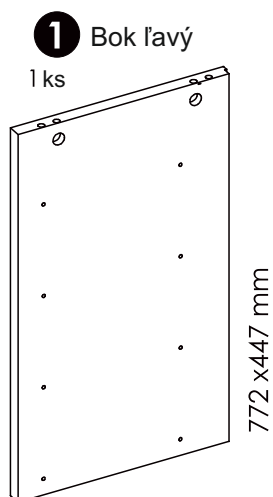

Krok 1:

Krok 2:

Krok 3:

Krok 4:







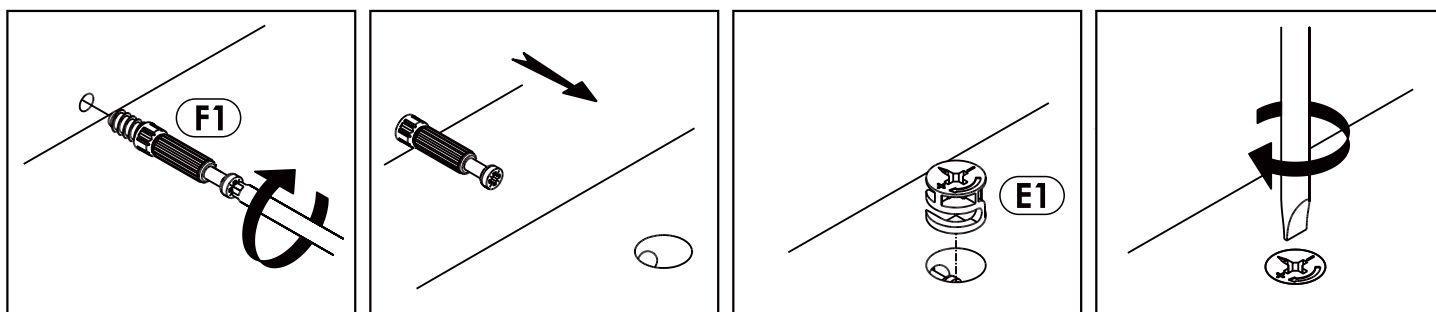


Schéma skladania


1 ►

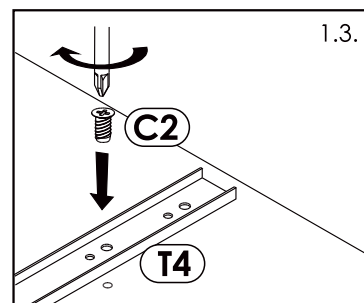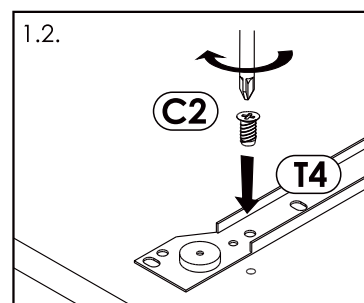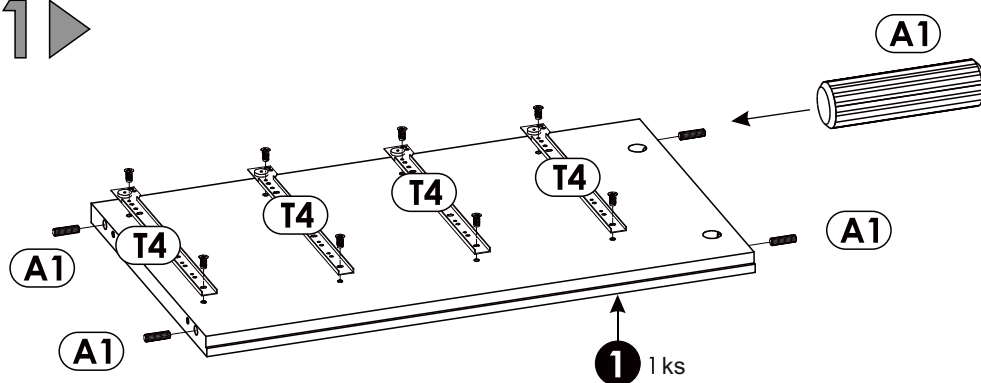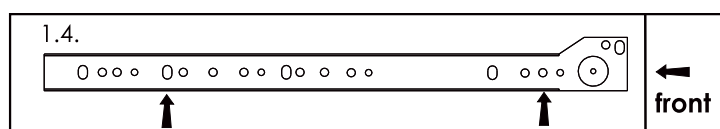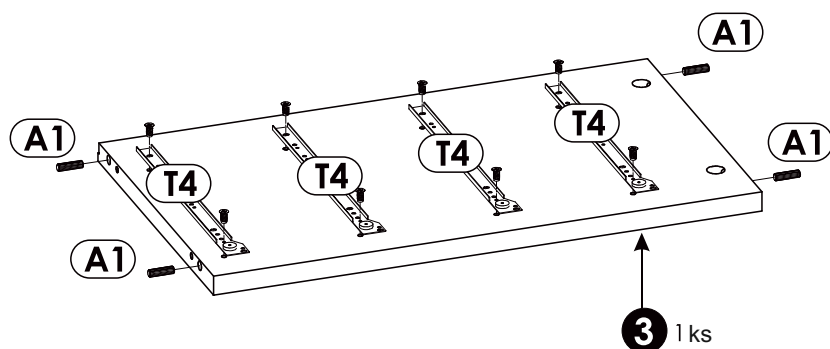

1.1.

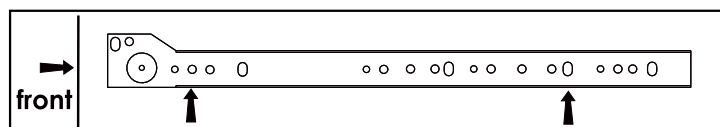


2 ▶

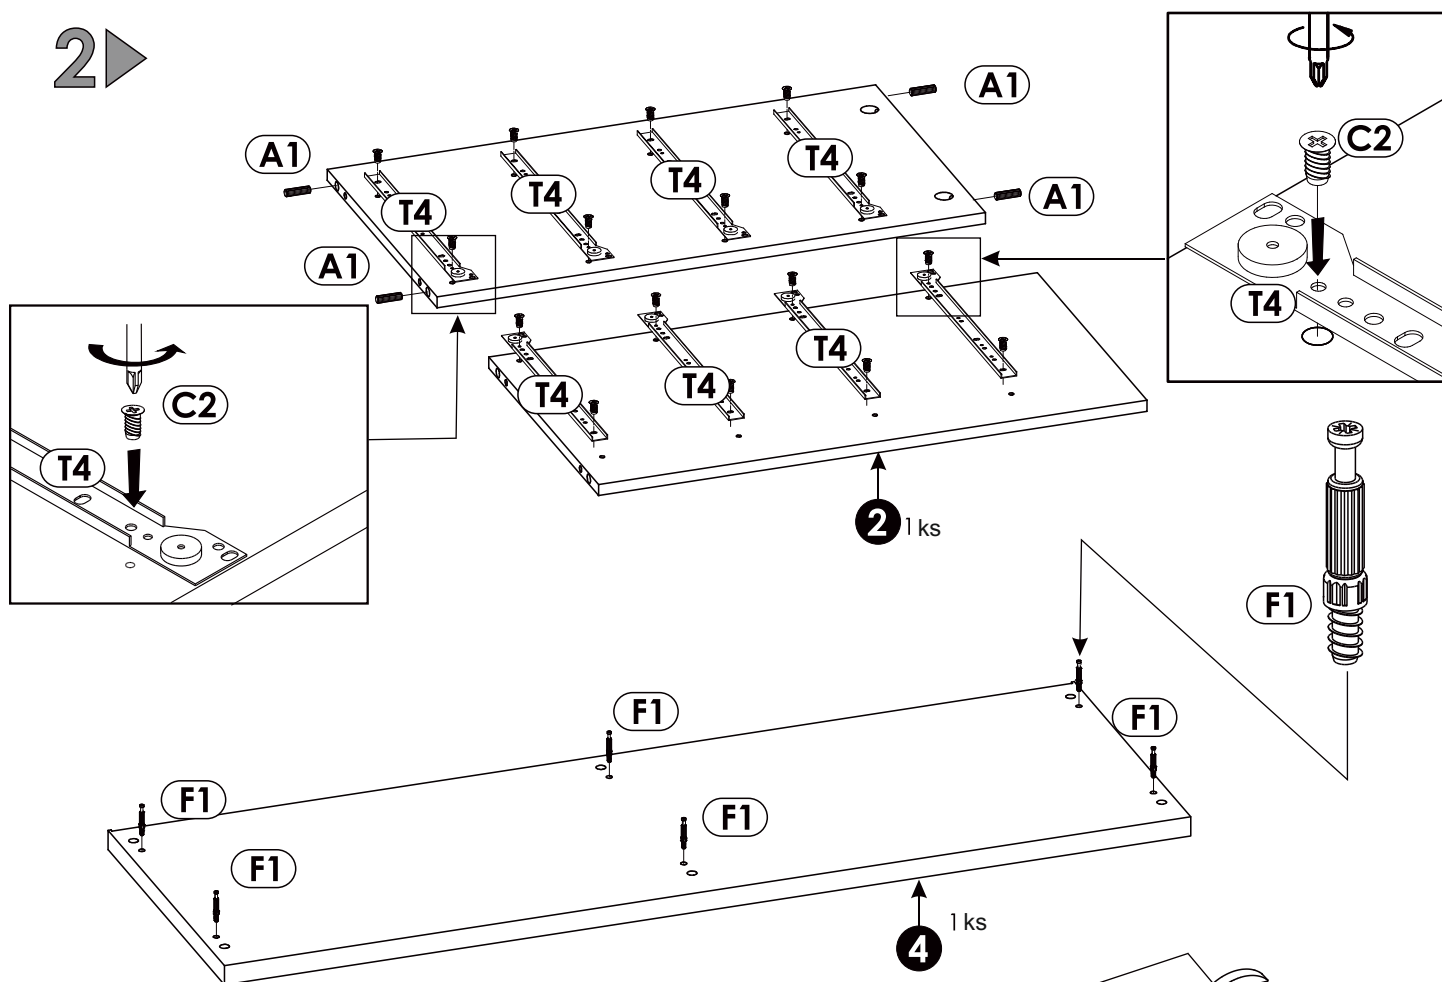


3 ▶

POZOR !!!
Zásada montáže na strane 4.

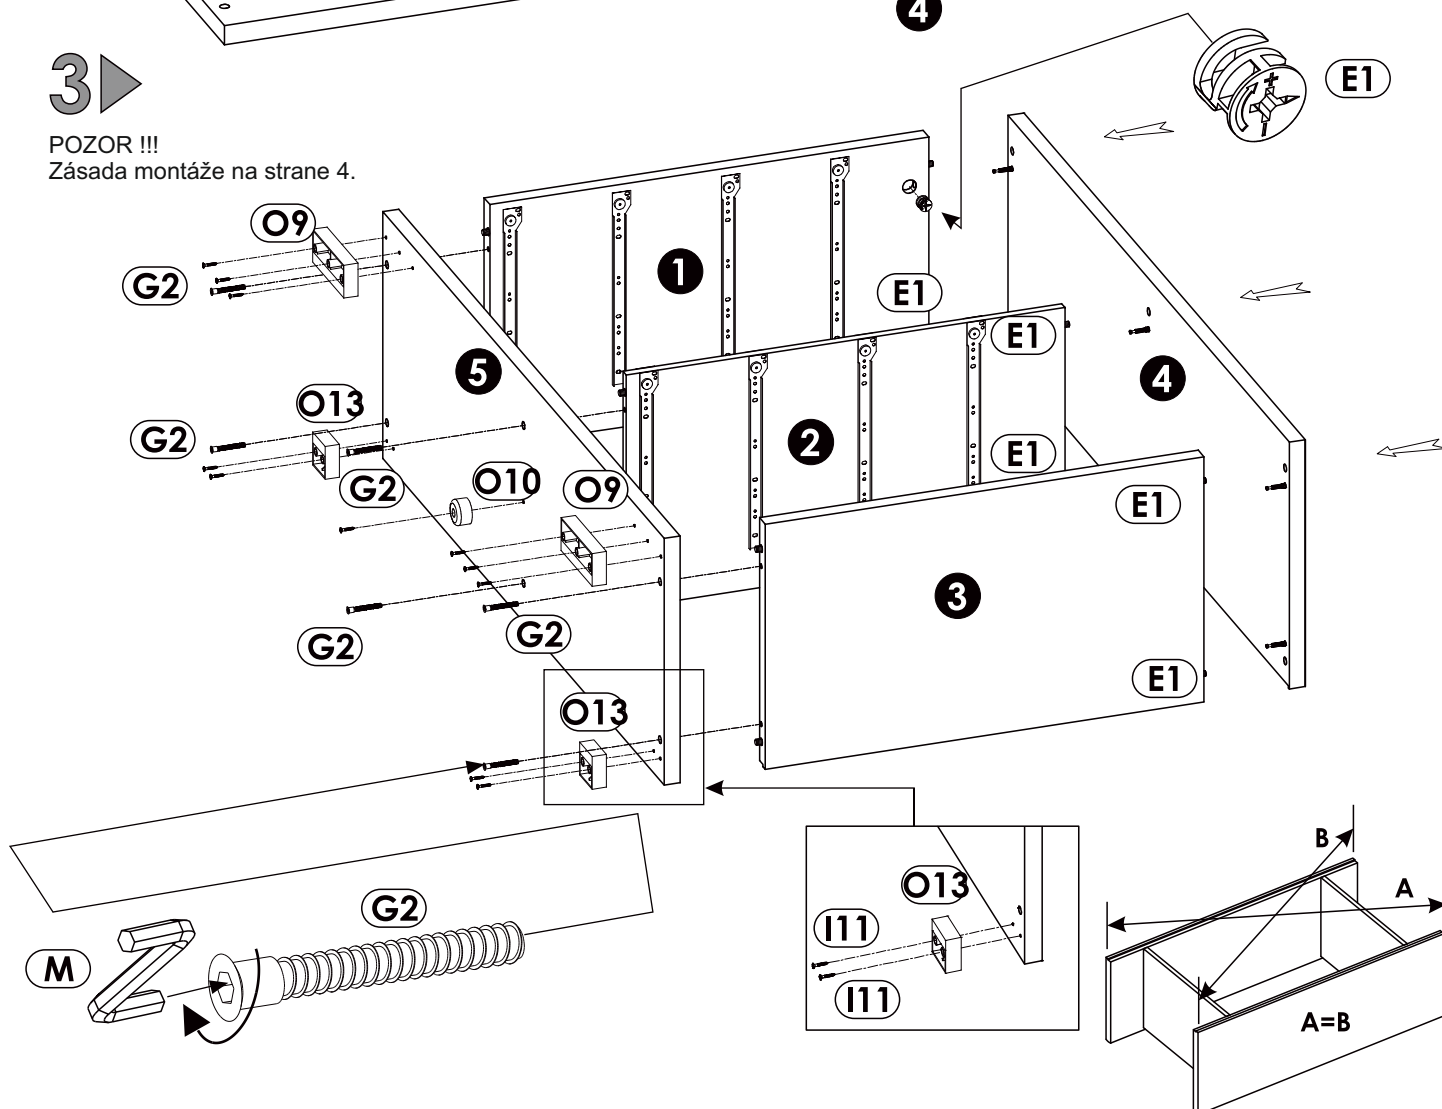







4



POZOR !!!
Pred upevnením zadnej steny dbajte,
aby uhlopriečky boli rovnako dlhé.
A=B

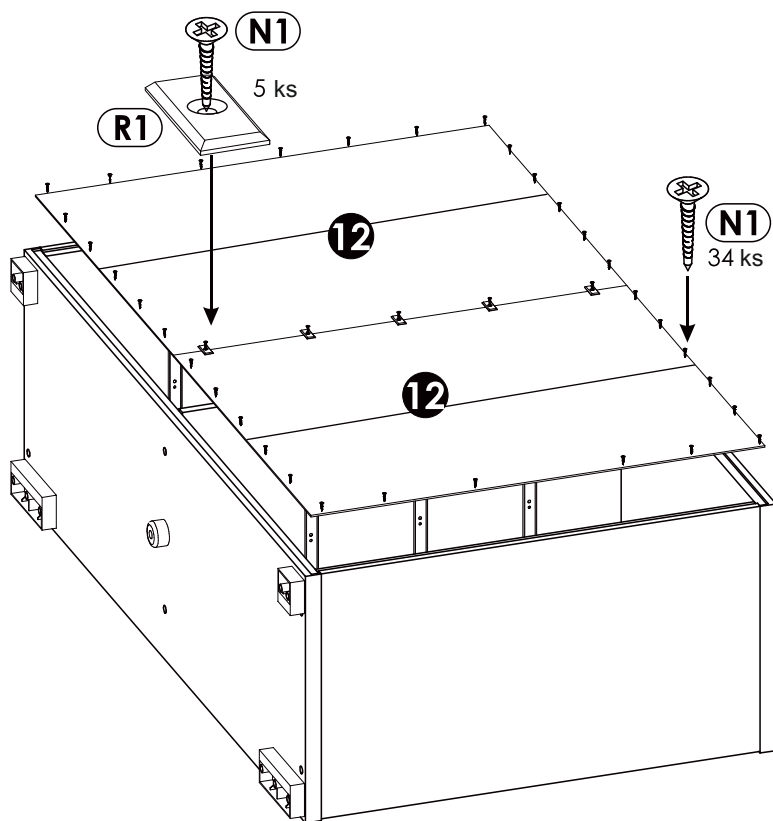

5

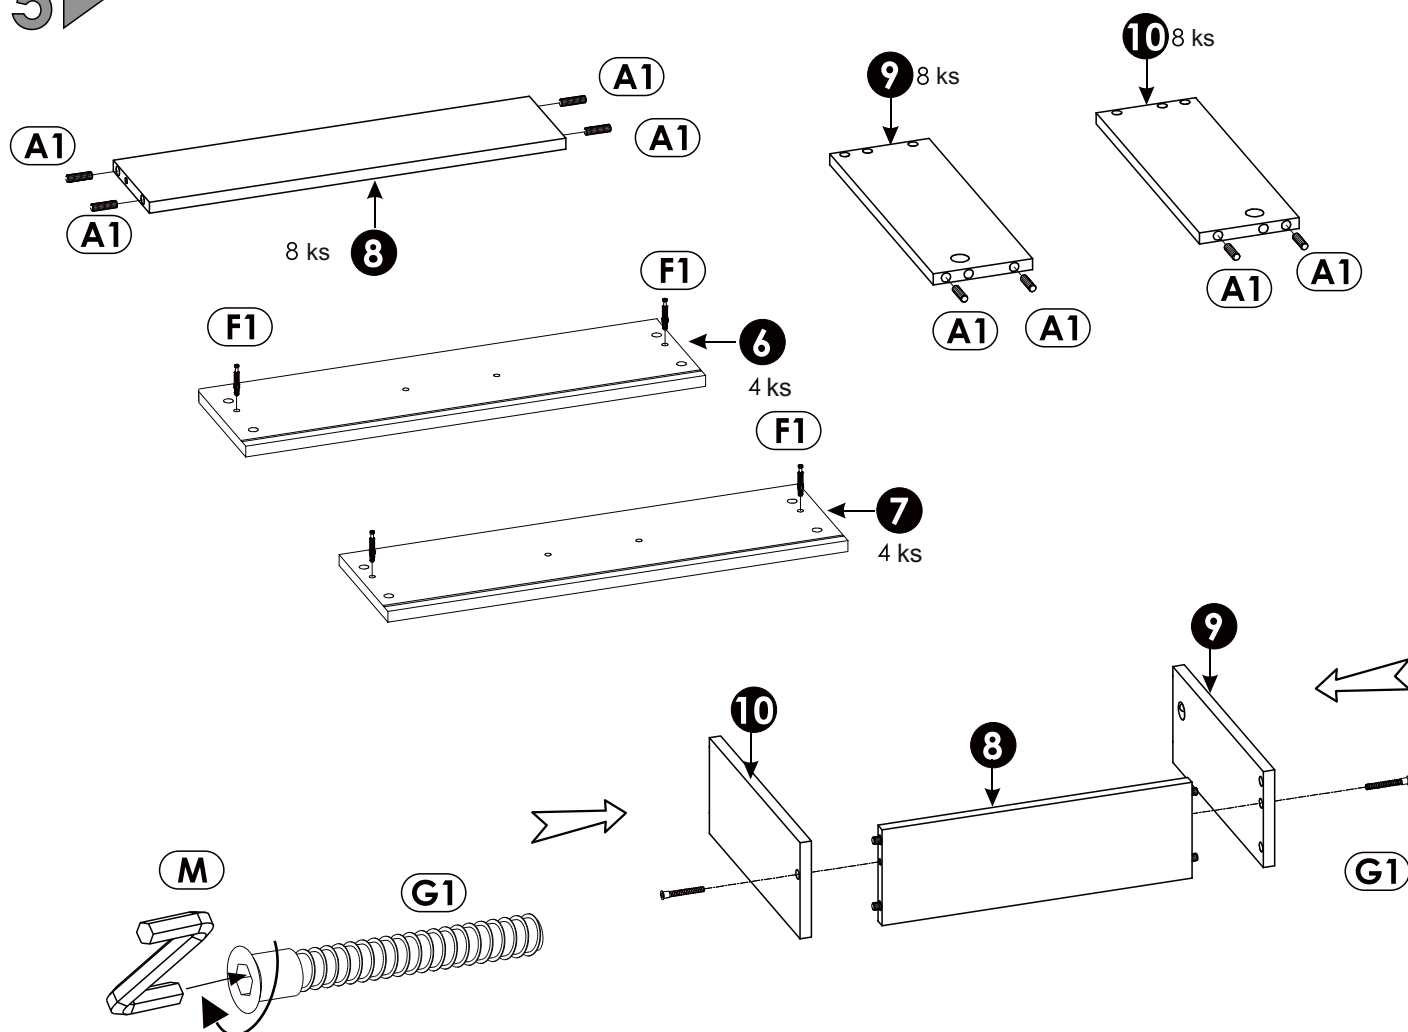

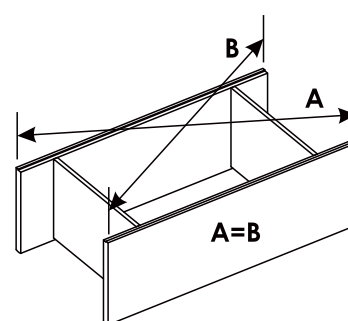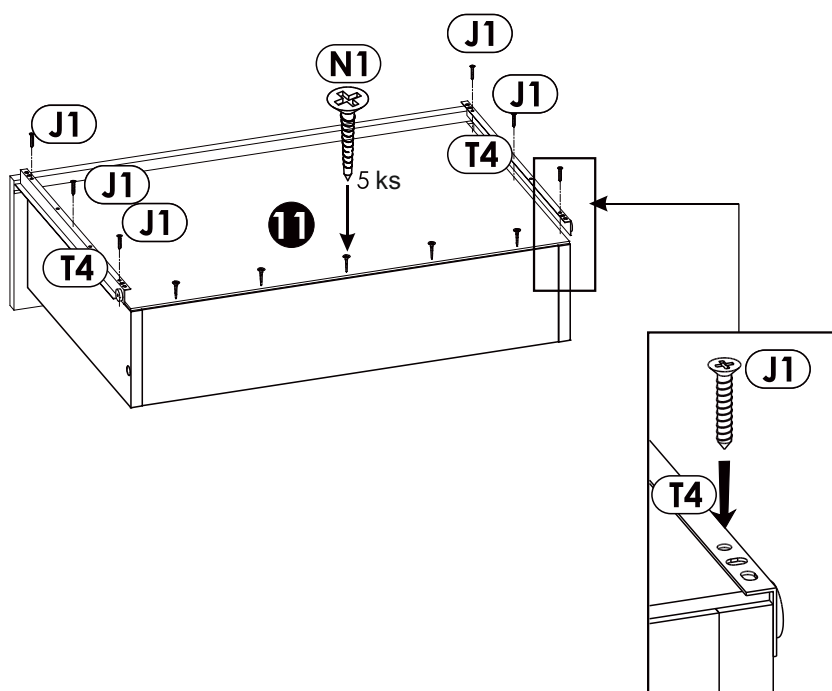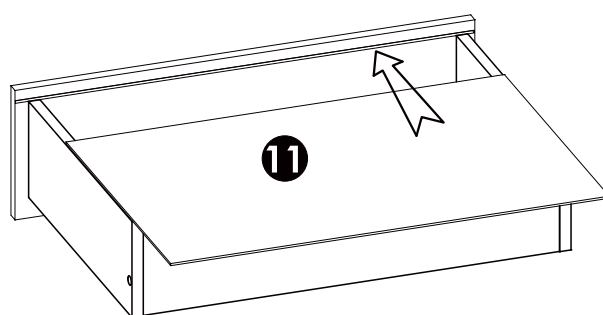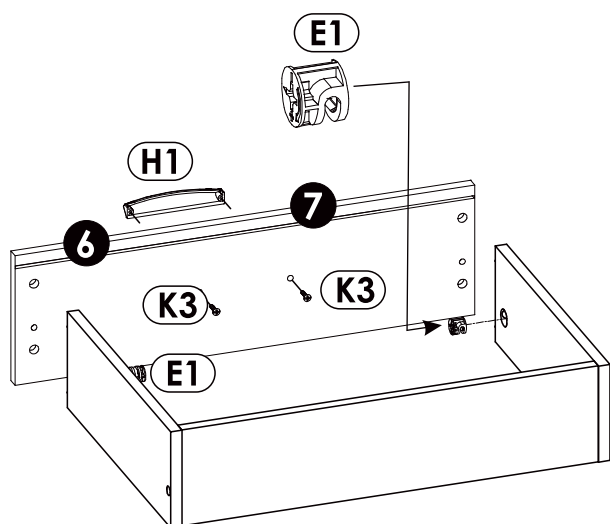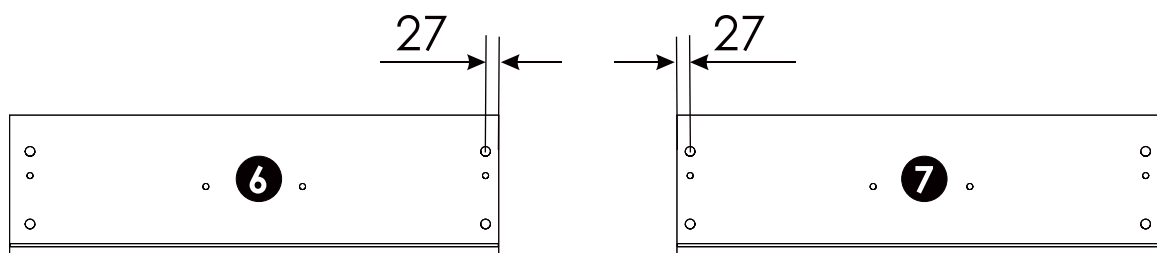

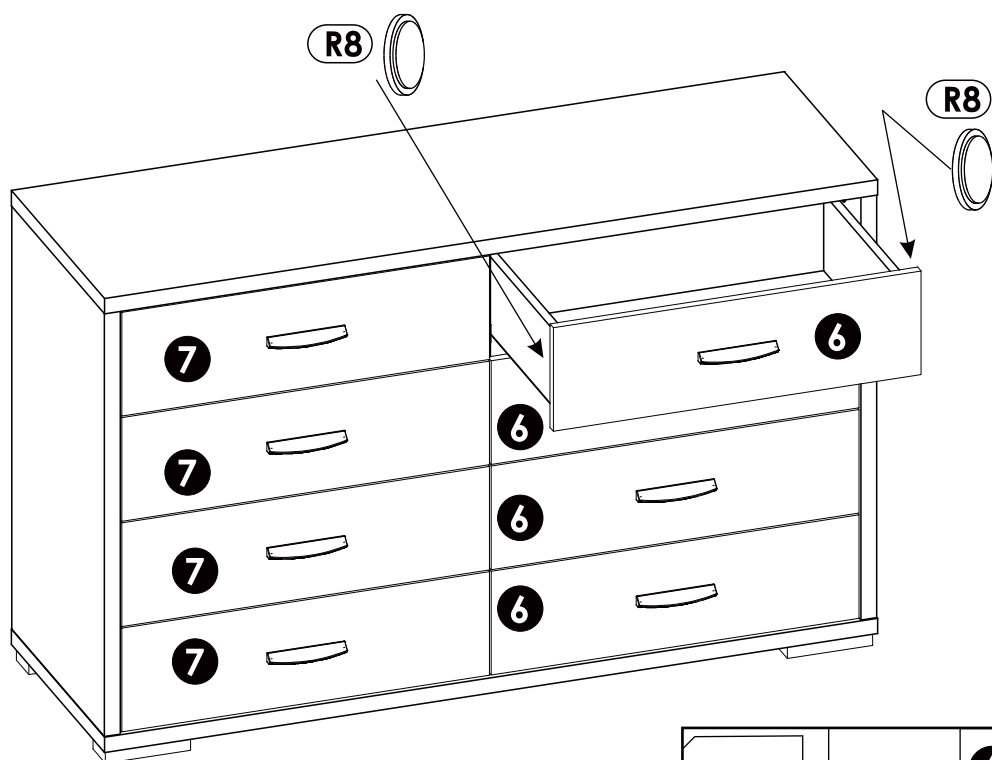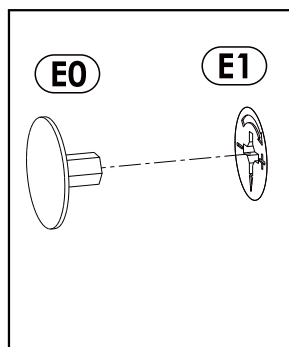

Vloženie šuflíka

