
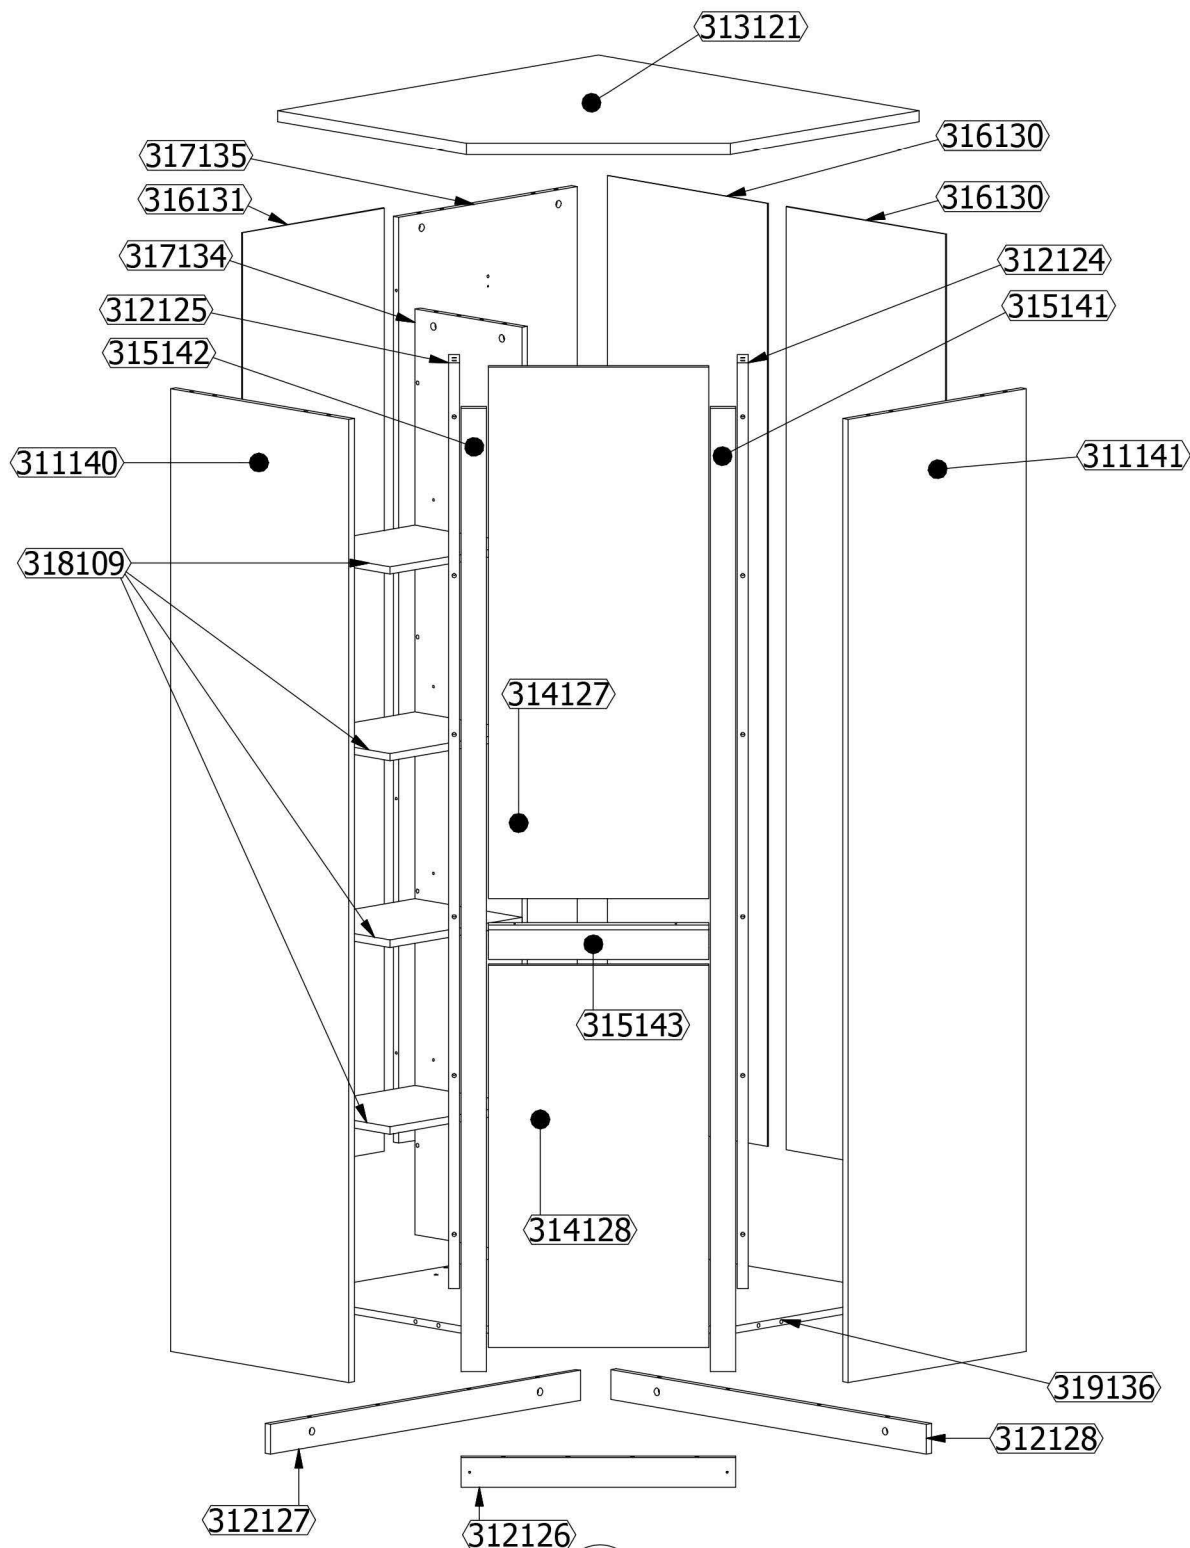
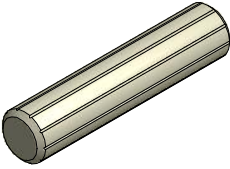
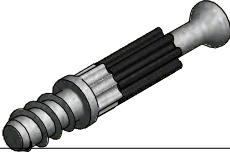
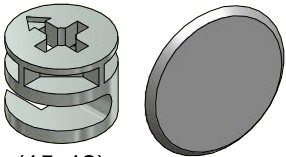
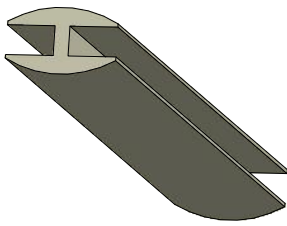
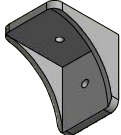
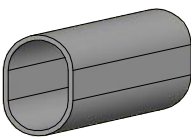
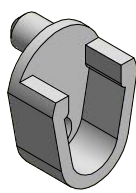
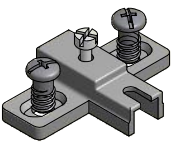
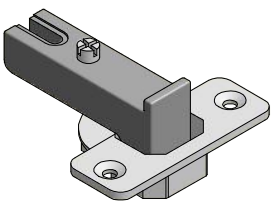



MONTE ROHOVÁ ŠATNÍKOVÁ SKRIŇA 1D

Montážny návod / Montageanleitung / Mounting instruction / Инструкция сборки




A x 26  (8x36)	B x 26 
C x 26  (15x12)	E x 110 
F x 1 	G x 12  
H x 20  (3,5 x 16)	K x 2  (4 x 30)
O x 16 	P x 4 
Q x 2 	Q1 x 4 
U x 4 	U1 x 4 
Z x 1 	


KROK 1

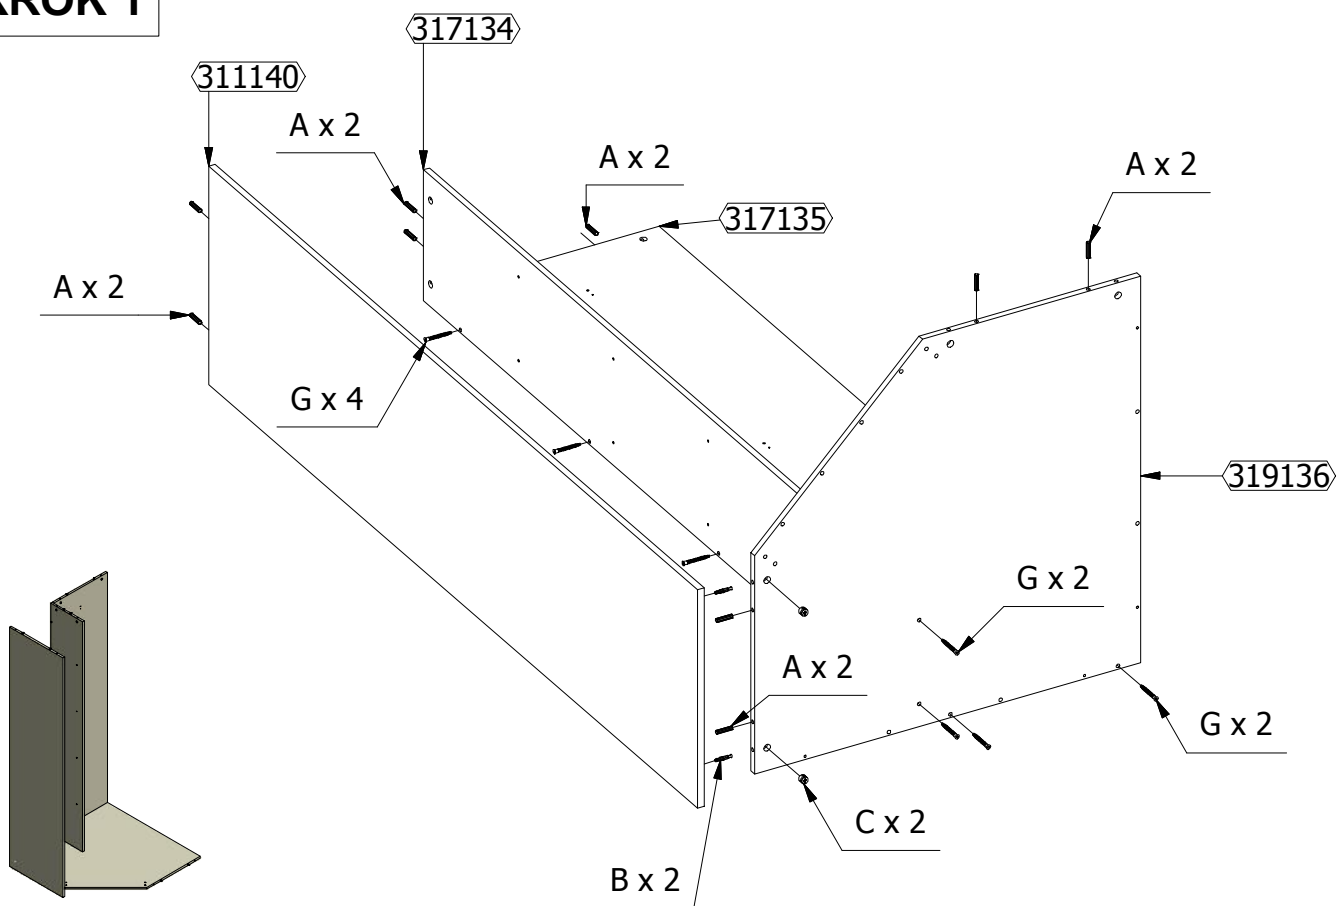



KROK 2

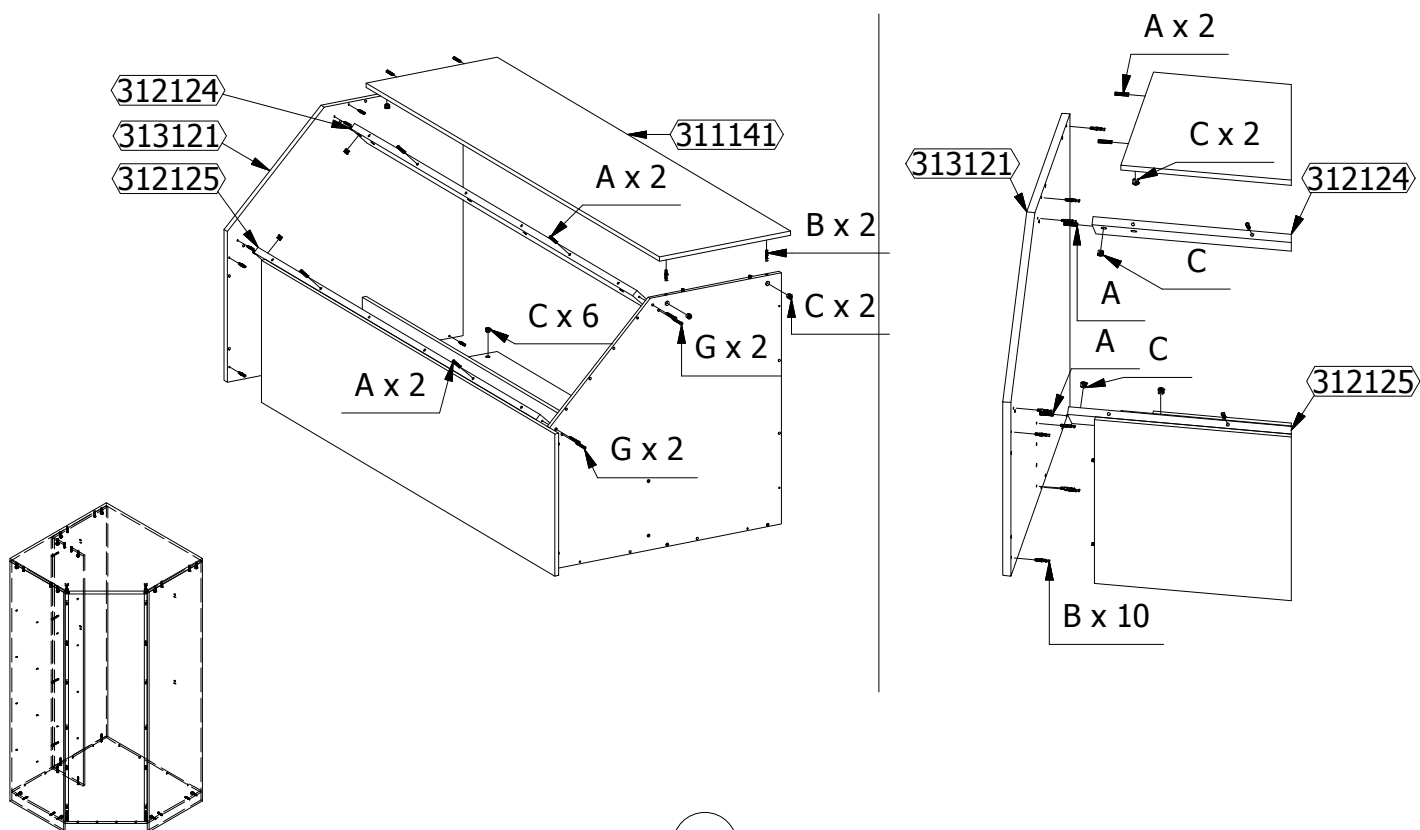


KROK 3

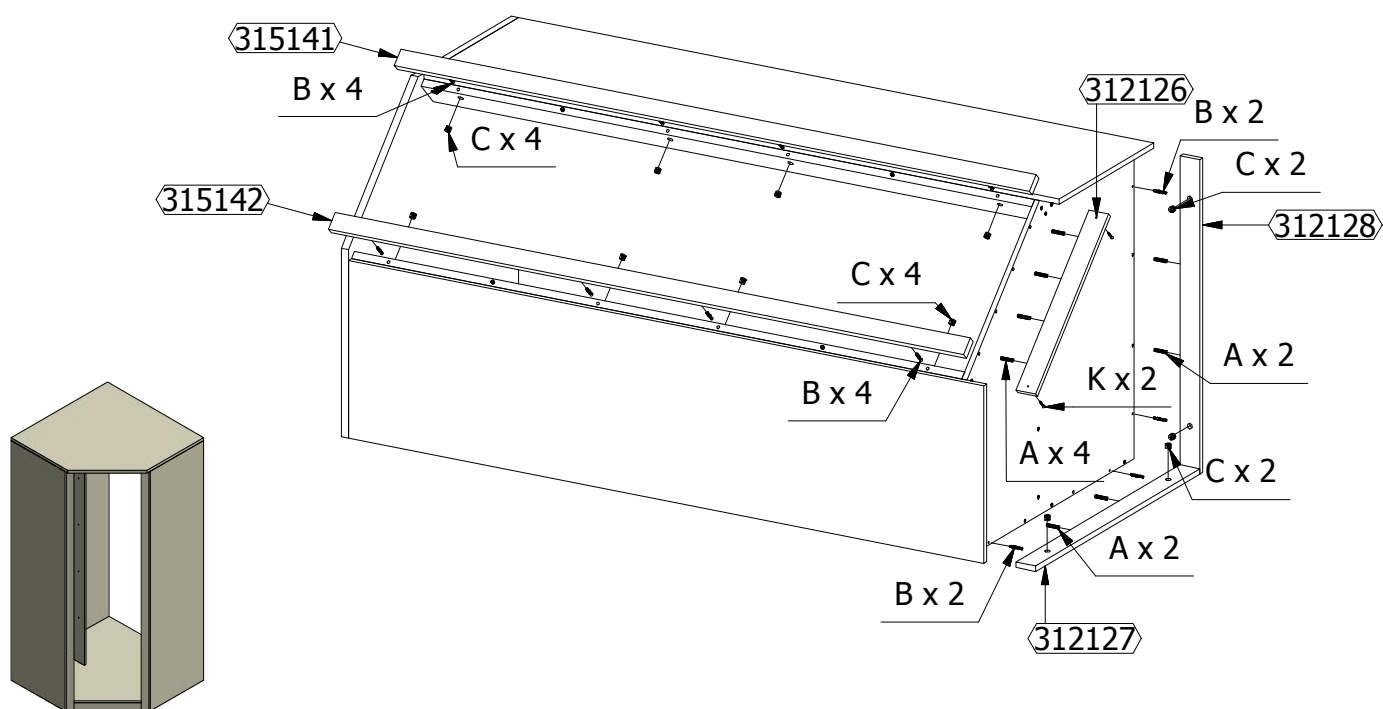


KROK 4

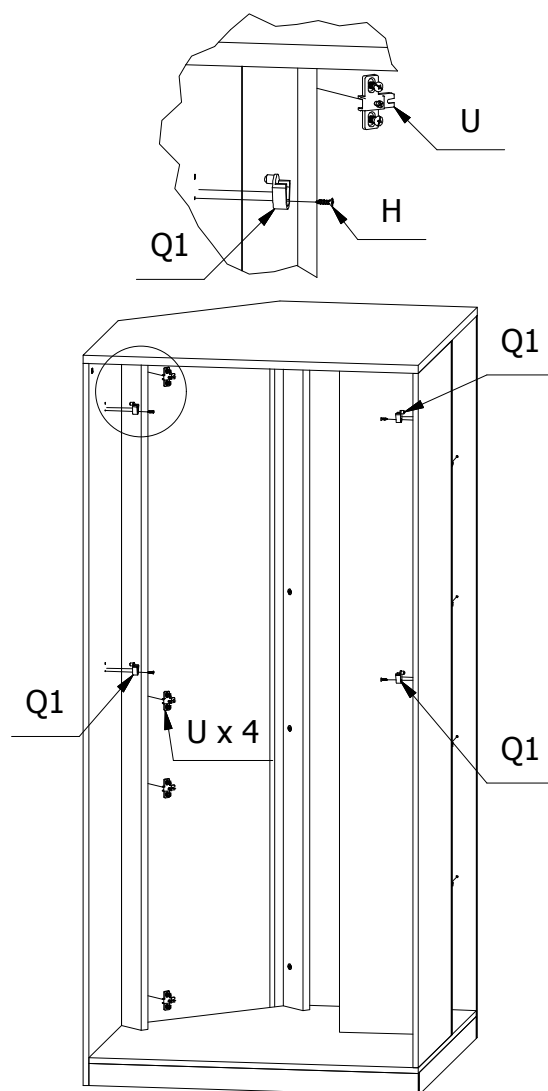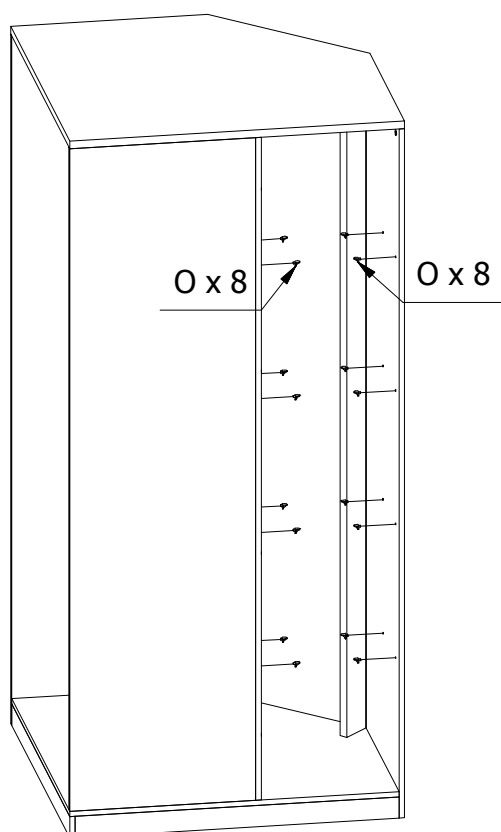

KROK 5

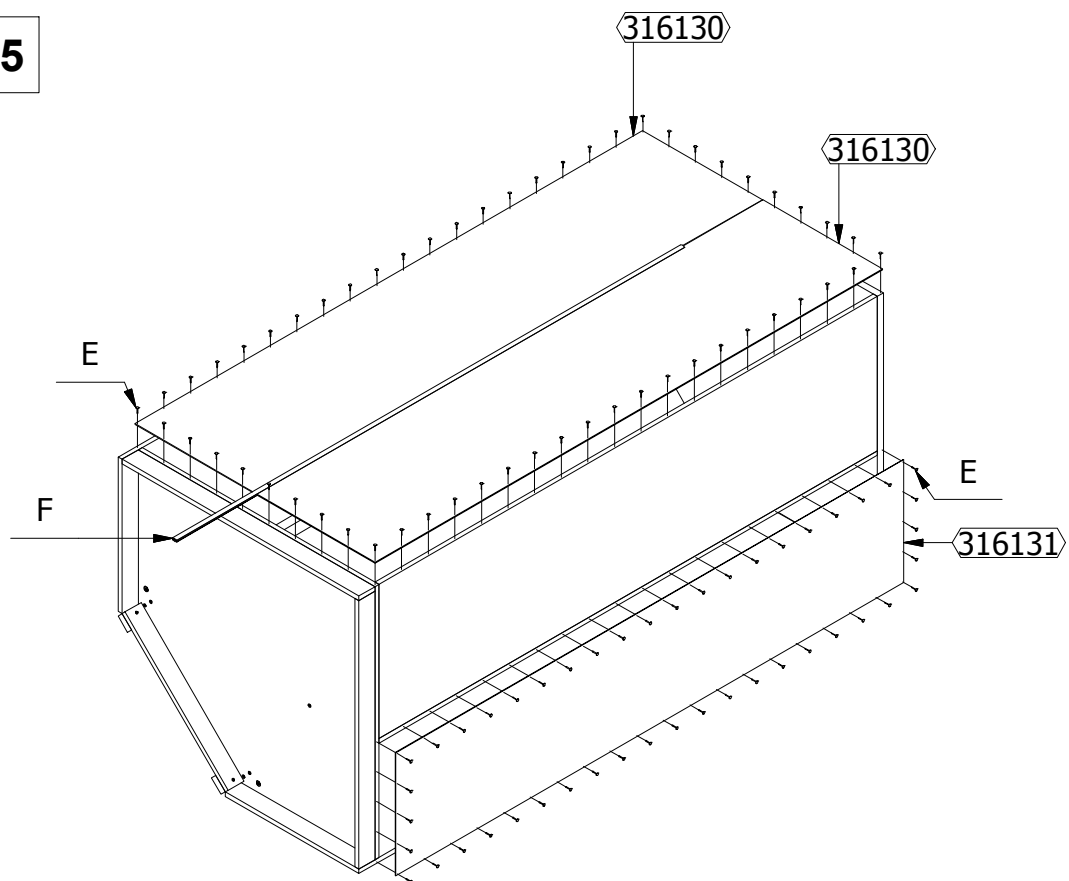

KROK 6

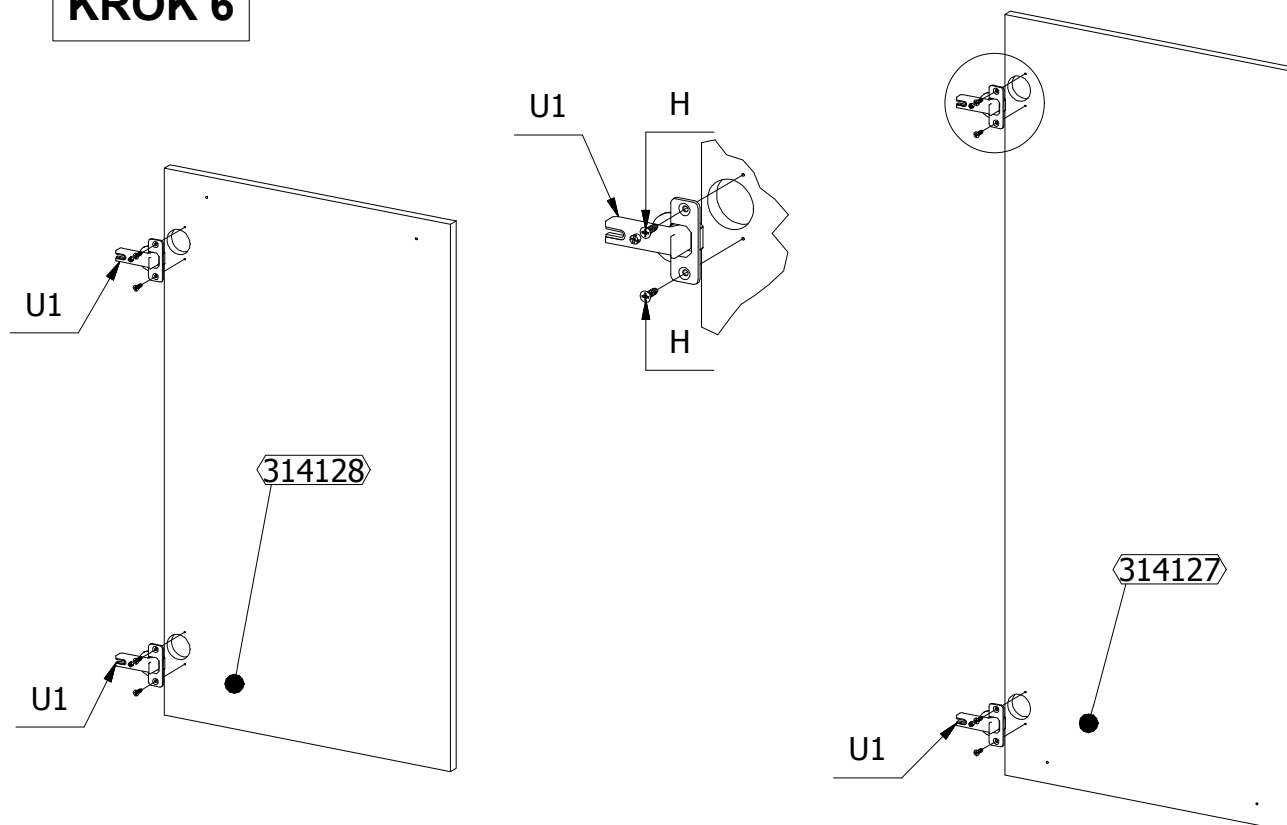

KROK 7

